
INSTALLATION Page 1 of 2


## INSTALLATION

Install the rear brake caliper assembly [1] to the swingarm. **NOTE:** 

• Align the caliper bracket groove with swingarm guide.

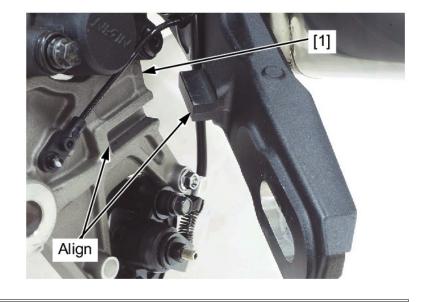

Install the side collars [1].

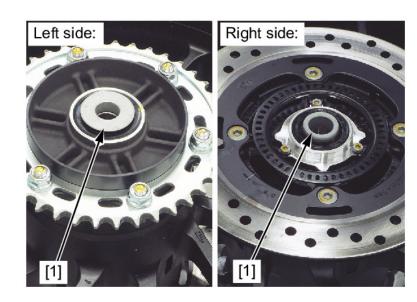

**INSTALLATION** Page 2 of 2

Apply a thin coat of grease to the rear axle outer surface. Install the rear wheel in the swingarm.

## NOTE:

- Install the brake disc between the brake pads.Be careful not to damage the brake pads.

Install the drive chain [1] over the driven sprocket.
Install the left adjusting plate [2] and rear axle [3] from the left side.
Install the right adjusting plate [4], washer [5] and rear axle nut [6].
Adjust the drive chain slack.

Check the clearance gap between the rear wheel speed sensor bracket and pulser ring.

